



care & maintenance

- 1 After selecting and purchasing your Hume door/s, store flat in a dry, well ventilated area prior to installation.
- 2 Your timber door may be affected by changes in temperature, moisture and location.
- 3 Before fitment, all six door surfaces should be sealed initially then after installation painted, stained or clear finished with good quality products. Follow the paint manufacturer's instructions with the correct number of coats on ALL surfaces.
- 4 Light reflective colours are recommended for Entrance Doors to reduce the possibility of bow, twist or warp. Dark colours may void Hume guarantee. Semi gloss finishes are recommended. Paint with a light reflectance value (LRV) finish greater than 50 should be used on External Doors. White – LRV approx, 95 Black – LRV approx 5.
- 5 Use the same colour on all six door surfaces. Different colours may cause doors to warp.
- 6 Entrance Doors require overhead protection (above).
- 7 Location and fitment of your door furniture depends on door construction. Honeycomb core doors have a lock block (piece of timber) located generally on the side with the Hume label and door furniture should be fitted in this location. Solid doors may have door furniture installed at any selected height, either side of door.
- 8 Door maintenance is necessary for long term performance and periodic inspections are recommended. At the first signs of deterioration, your door should be properly refinished, making sure that all bottom surfaces of the door receive proper resealing and painting.
- 9 To clean your door, use a damp cloth. Do not hose or use chemicals or abrasives on your door. Lightly oil hinges and door furniture for optimum performance.

Contact your nearest Hume Doors stockist or the Hume Doors website for more information.



guarantee



1953-2013

60
YEARS

